


# Sewing Instructions

## Chemo Bag Cover

1. Fold top and bottom edges of fabric (approx. 1/4 in) toward the wrong side of fabric. Iron and sew. Repeat for second piece of fabric.

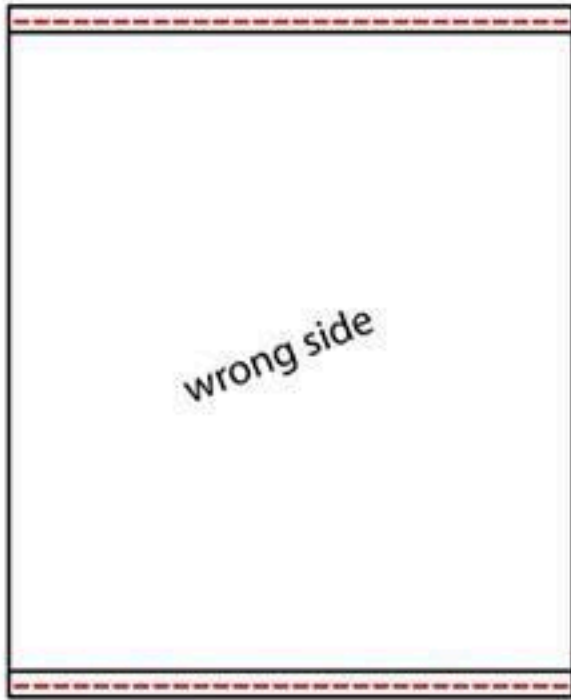

2. On one of the two pieces of fabric, sew the label on the bottom right corner.



3. Match both pieces of fabric with the correct sides facing each other and pin together.

4. Sew together, leaving a (approx) 2 1/2 inch hole on top and leave the bottom open.



5. Turn correct side out

